

1 987 432 094







Renault Scenic II

05.03 →

- | | |
|--|---|
| D Innenraumfilter
Montageanleitung | NL Interieurfilter
Montagehandleiding |
| GB Cabin filter
Installation instructions | E Filtro ventilacion
para interior
Instrucciones de montaje |
| F Filtre d'habitacle
Notice de montage | P Filtro de purificação
do habitáculo
Instruções de montagem |
| I Filtro abitacolo
Istruzioni di montaggio | S Kupéfilter
Installationsanvisning |

BOSCH



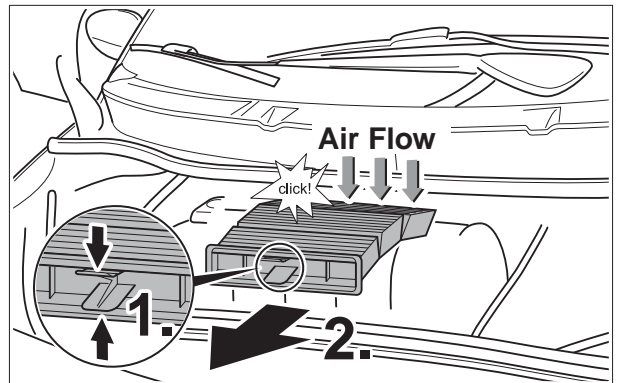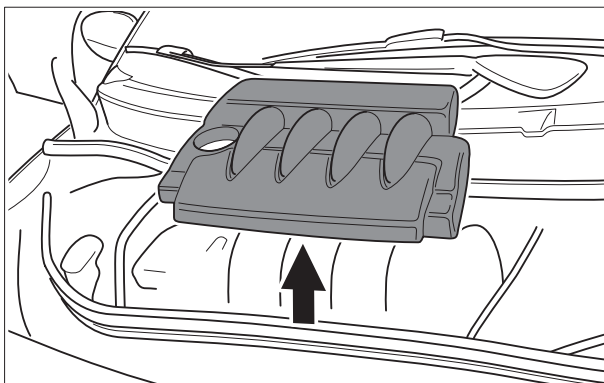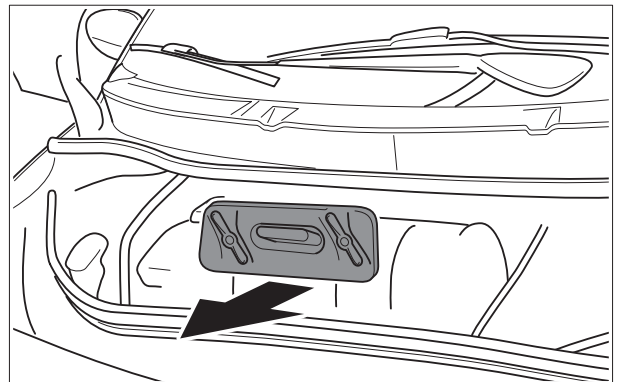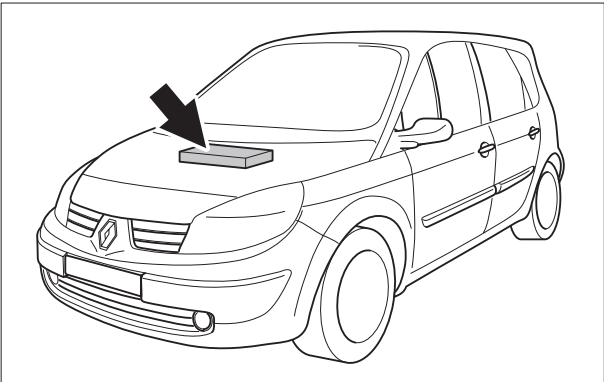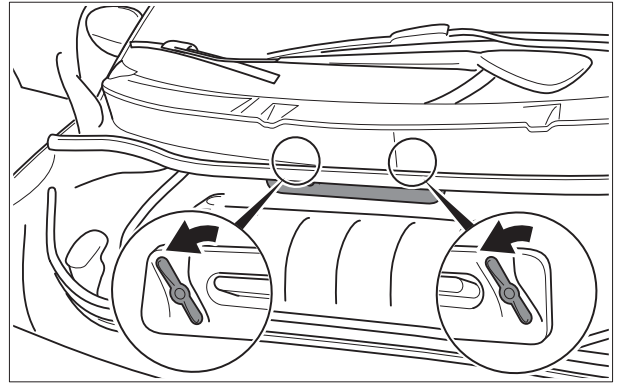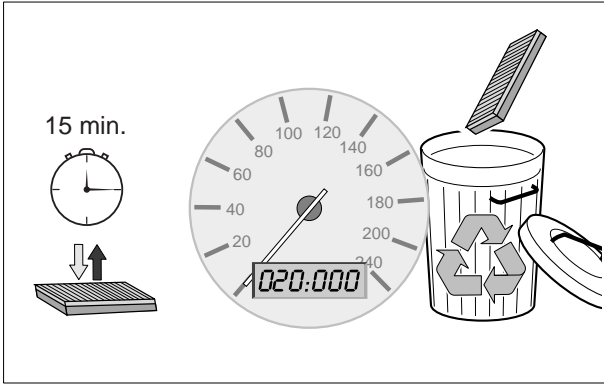



Service

+49 (0) 180-500 4745

gebührenpflichtig/subject to charges/payant



Robert Bosch GmbH
Postfach 41 09 60, D-76225 Karlsruhe
www.bosch-automotive.com



Gedruckt auf Recycling-Papier Printed in Germany
Printed on recycled paper Imprimé en Allemagne